

# RENAULT

## 6 Sealing and soundproofing

65A OPENING ELEMENT SEALING

66A WINDOW SEALING

Dacia Duster Explorers UK

---

**X79**

---

**NOVEMBER 2009**

**EDITION ANGLAISE**

---

"The repair procedures given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The procedures may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which the vehicles are constructed".

All rights reserved by Renault.

Copying or translating, in part or in full, of this document or use of the service part reference numbering system is forbidden without the prior written authority of Renault.

# DUSTER - Chapitre 6

## Contents

Pages

### 65A OPENING ELEMENT SEALING

Side door frame seal:  
Removal - Refitting 65A-1

### 66A WINDOW SEALING

Front side door window run  
channel: Removal - Refitting 66A-1

Front side door exterior  
weatherstrip: Removal -  
Refitting 66A-2

Rear side door exterior  
weatherstrip: Removal -  
Refitting 66A-3

Rear side door window run  
channel: Removal - Refitting 66A-4

Dacia Duster Explorers UK

# OPENING ELEMENT SEALING


## Side door frame seal: Removal - Refitting

# 65A


### REMOVAL

#### I - REMOVAL PREPARATION OPERATION

H79

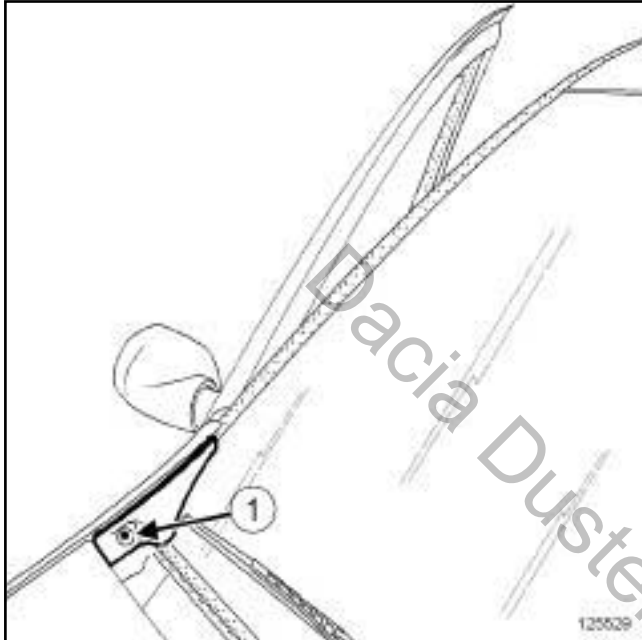

- Remove the trim piece bolt (1) .

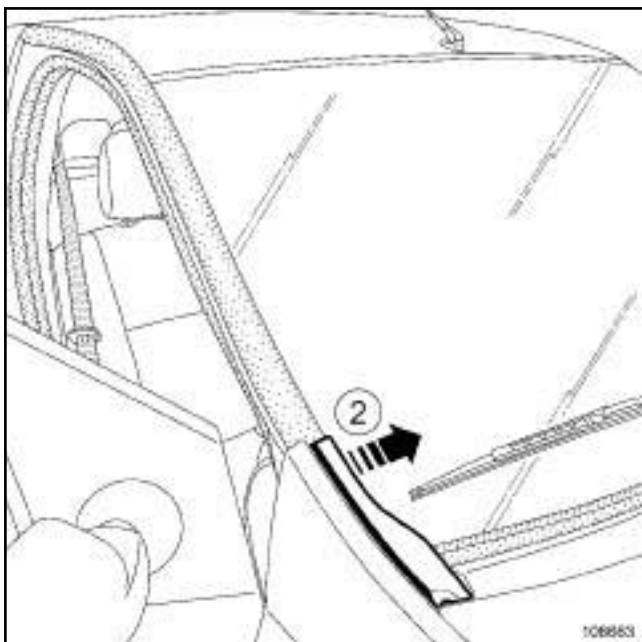


- Unclip the trim at (2) .



- Remove the trim (2) .

#### II - REMOVAL OPERATION

H79

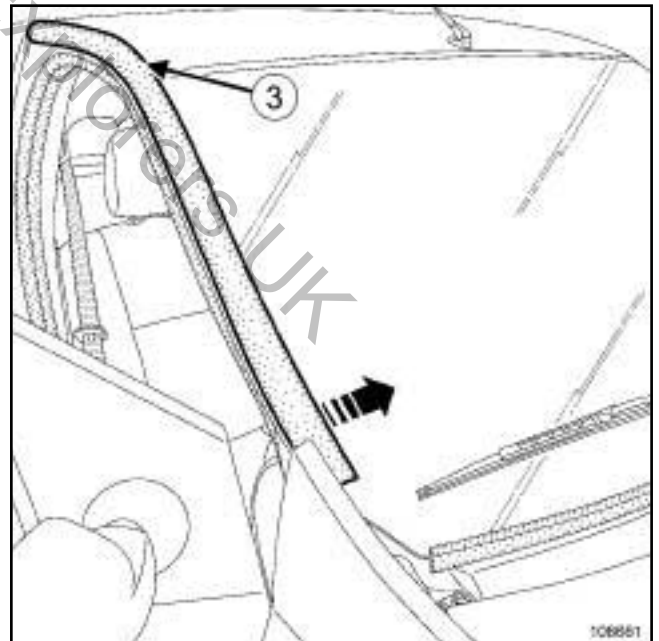


- Remove the frame seal (3) .

# OPENING ELEMENT SEALING

## Side door frame seal: Removal - Refitting

**65A**

H79

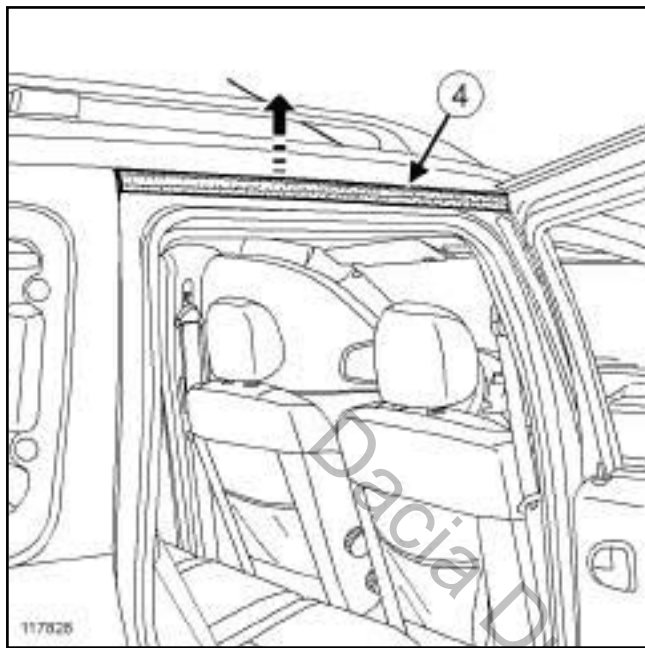

- Remove the frame seal (4) .

### REFITTING

- Proceed in the reverse order to removal.

### REMOVAL

#### I - REMOVAL PREPARATION OPERATION

Remove:

- the front side door trim (see **Front side door trim: Removal - Refitting**) (72A, Side opening element trim),
- the front side door sliding window (see **Front side door sliding window: Removal - Refitting**) (54A, Windows).

#### II - REMOVAL OPERATION



107952



107953

- Detach the front side door window run channel at (1), (2).
- Remove the front side door window run channel.

#### REFITTING

- Proceed in the reverse order to removal.

### Special tooling required


Car. 1363      Set of trim removal levers.

### REMOVAL

#### I - REMOVAL PREPARATION OPERATION

- Lower the window.

#### II - REMOVAL OPERATION

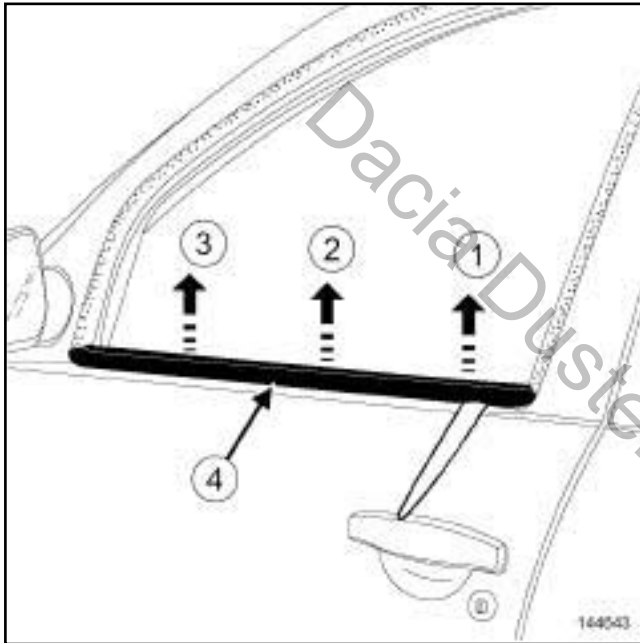

- Carefully remove the exterior weatherstrip (4) using the tool (Car. 1363) (take care not to damage the part).

### REFITTING

- Proceed in the reverse order to removal.


Special tooling required	
Car. 1363	Set of trim removal levers.

### REMOVAL

#### I - REMOVAL PREPARATION OPERATION

- Lower the window.

#### II - REMOVAL OPERATION

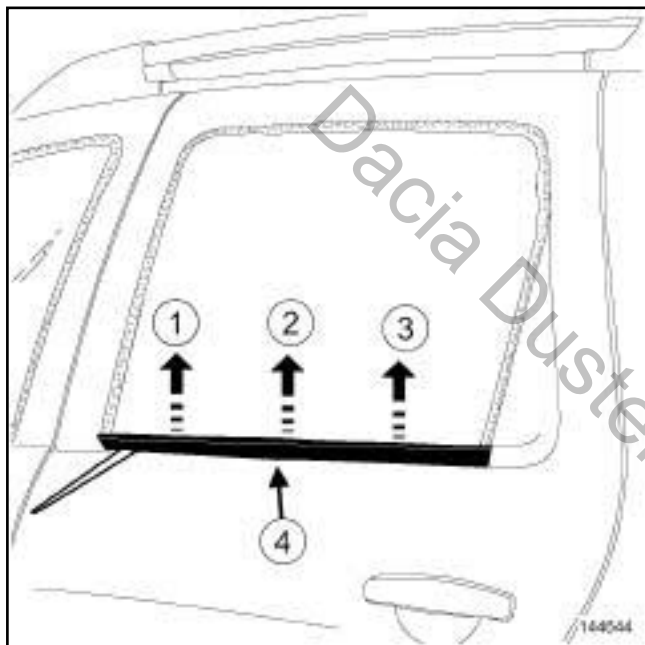

- Carefully remove the exterior weatherstrip (4) using the tool (Car. 1363) (take care not to damage the part).


### REFITTING

- Proceed in the reverse order to removal.


### REMOVAL

#### REMOVAL PREPARATION OPERATION

- Remove:
  - the rear side door trim (see **Rear side door trim: Removal - Refitting**) (72A, Side opening element trim),
  - the rear side door sliding window (see **Rear side door sliding window: Removal - Refitting**) (54A, Windows).

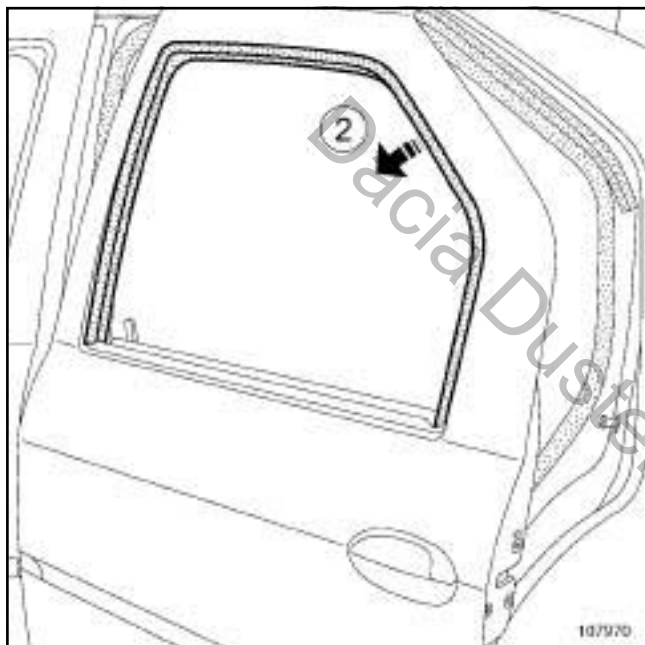

107970

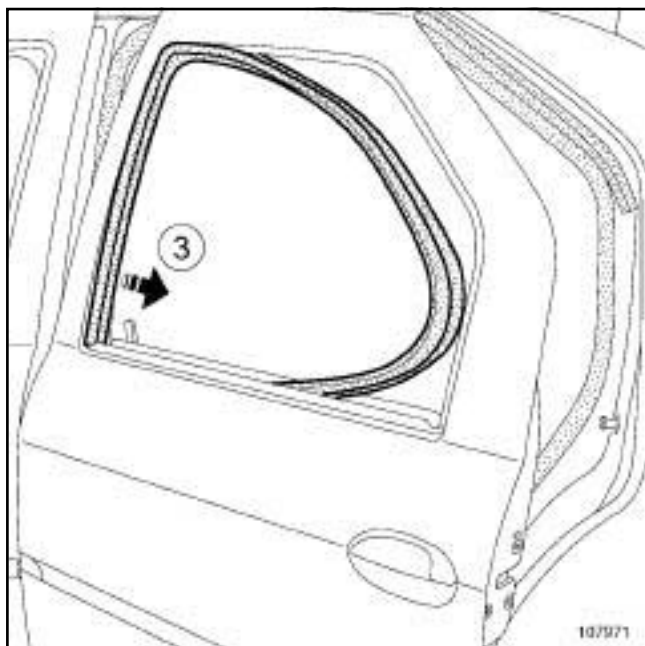

107971

- Remove the rear side door window run channel at (2) and (3) .

### REFITTING

#### I - REFITTING OPERATION FOR PART CONCERNED

- Refit the rear side door window glass run channel.
- Refit:
  - the rear side door sliding window (see **Rear side door sliding window: Removal - Refitting**) (54A, Windows),
  - the rear side door trim (see **Rear side door trim: Removal - Refitting**) (72A, Side opening element trim).